



INDILOAD

DATA CARD

MANUAL

Chapter 1 : General

Chapter 2 : Connections

Chapter 3 : Operation

Chapter 4 : Technical sheet

Chapter 1 : General

The **DATACard** is an independent data recording card which allows the user to store the most important crane data without the need for a permanent link with a fixed computer.

The **DATACard** has a memory (non-volatile RAM) supported by a lithium battery (with a minimum service life of 5 years) and stores the following data :

- number of overloads
- number and duration of lifting and lowering movements
- number and duration of cross and long travels
- number of "tips" in the above functions
- load spectrum according tot the loads lifted

The data are tapped using a compatible MS-DOS (portable) PC through an RS232 output assembled on the card.

The storage capacity (memory) of the card is at least 1 year (using the lifting keyboard at a rate of 8 hours/day).

The **DATACard** is supplied :

- either as an additional card for the **INDILoad Mark 1**
- or as an independent "box" in a metal housing to be used with load limiters of other makes fitted with a 0-10 VDC output or with recording devices which have a reinforced output (between 0 an 10 VDC).

A CD-ROM and a **COM CABLE** is supplied with every **DATACard** for the installation and tapping of the software with the stored data.

The data are converted into an ASCII file or can be converted into a special software program we have developed in-house, that is : "**INDISoft**".

This powerful and user-friendly program operates in the "**Windows**" environment and displays the stored data in tables and graphs. It allows the user to schedule maintenance work, to locate unproductive hours and to find the "safe working period" (SWP) so that the exact (FEM) user class can be determined.

Chapter 2 : Connections

Two versions are supplied :


- A. as an additional card for the INDILoad Mark 1
- B. as a "stand alone" unit in a housing

Depending on the version you purchase, please follow the instructions given below :

- A. as an additional card for the INDILoad Mark 1

If the **DATA**Card is supplied separately, you first have to fit it into the box of the load limiter Mark 1.

To do this, follow these instructions :

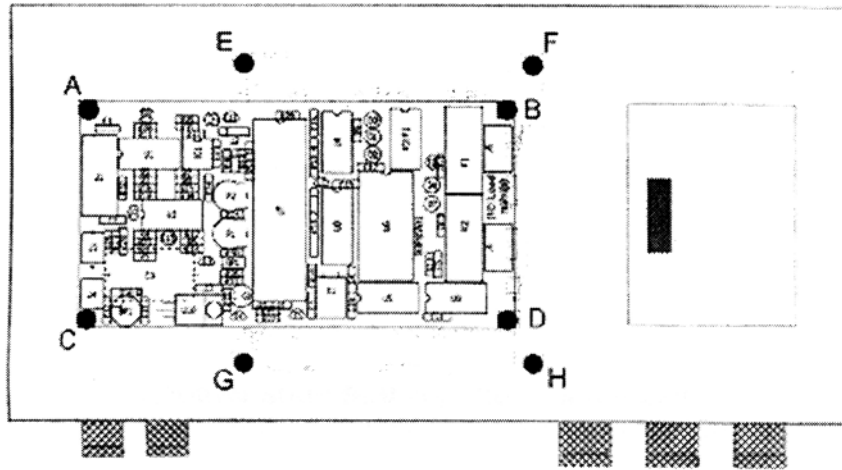


- 2.A.01 Disconnect all existing electrical connections from the load limiter (if they have been previously connected)
- 2.A.02 Unscrew the four screws (A, B, C, D) and remove the card of the **Mark 1**
- 2.A.03 Unscrew the four screws (E, F, G, H) and place the **DATA**Card in the place provided in the right direction (see diagram)
- 2.A.04 Screw home the four screws (E, F, G, H)
- 2.A.05 Place the board of the Mark 1 back in its original position and screw home the four screws (A, B, C, D)

2.A.06 Connect the power supply of the **DATACard** using the clamp of the **Mark 1** (2.01) (see operating instructions of the Mark 1)

2.A.07 Connect the electrical connections of the Mark 1 (see operating instructions of the Mark 1)

B. as a "stand alone" unit in a housing

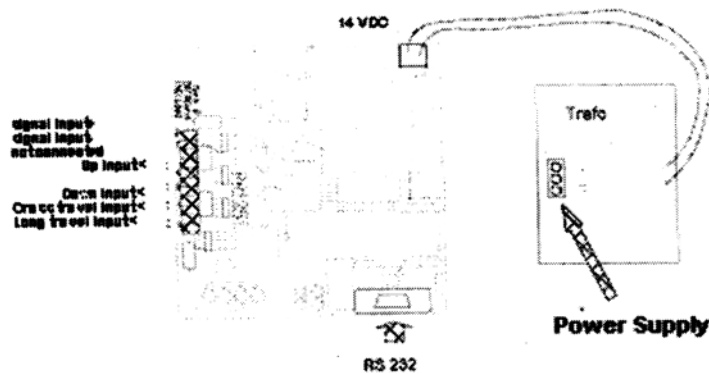

2.B.01 Connect the power supply (48, 110 or 230 VAC) to the transformer

2.B.02 to 2.B.07 not applicable

Additional connections for both cases (A or B)

Before power-on, make the following connections :

2.8 Connect the 0-10VDC output from the load limiter Mark 1 (or from another source) using the + and - signal output clamps

2.9 Make the connections between the relays of the lift movement, lowering movement, cross travels (left and right) and long travels (forward and back) with the datacard inputs, where :

There exist 3 different DATACards :

DATACard 0V for 4 volt free contacts

DATACard 24V for 4 differential contacts (input 24 VAC)

DATACard 42V for 4 differential contacts (input 48 VAC)

↑	= lift
↓	= lower
↔	= cross travels
↗ ↘	= long travels

General remark:

We advise you to use the following types of cable :


- for 48, 110 or 230 VAC supply cable of at least 1 mm²
- for 0-10 VDC signal screened cable 1 mm²
- for connections from relays of the load limiter with the main relay lifting cable of at least 1 mm²
- for signals from the relay lifting, lowering, cross travels and long travels to the DATACard cables of at least 1 mm²
- for the 14 VAC from Mark 1 to DATACard cable of at least 1 mm²

Chapter 3 : Operation

3.01 When using for the first time, connect the **RS232** output up to a serial port "COM 1" : on your compatible (portable) PC.

For the connection between the **DATACARD** and your compatible PC use the **COMCABLE** supplied.

If you lose the original **COMCABLE** and you wish to make a communication cable yourself, the connections must be as follows :

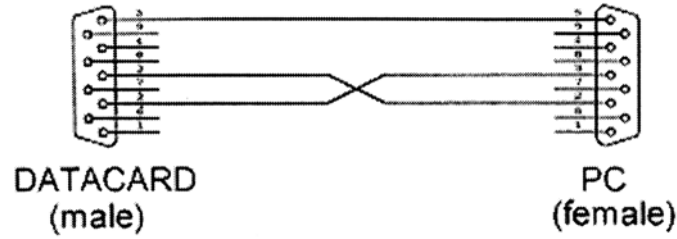

3.2 Connect the power supply.

3.3 Place the CD-ROM supplied with your DATACard in your PC and start the program Dgraph 3, follow the instructions.

TO TEST THE SYSTEM

- Notice that the **yellow LED** at the **RS 232 connector** flashes once per second.
- Lift the weight and notice that the yellow LED UP from the four LED's UP/DN/CT/TR is lit.
- Lower the weight and notice that the yellow LED DN from the four LED's UP/DN/CT/TR is lit.
- Cross travel and notice that the yellow LED CT from the four LED's UP/DN/CT/TR is lit.
- Long travel and notice that the yellow LED TR from the four LED's UP/DN/CT/TR is lit.

Chapter 4 : Technical Sheet DATACard

Power supply:

DATACard : 14 VAC (from the load limiter Mark 1)
(+/- 15% 50/60 Hz)

DATACard in metal box : 48 VAC, 110 VAC ou 230 VAC
(+/- 15% 50/60 Hz)

Enclosure :

DATACard : Dimensions : 107x 110x24 mm
Weight: 150Gr.

DATACard in Metal box : Dimensions: 300x150x80 mm
Weight: 3.3 Kg.
Protection degree : IP 54

Temperature

Range : Working temp. : -20°C a + 60°C
Stored temp. : -40°C a + 85°C

Inputs :

1 analog input Empty hook : adjustable between 0 and 5 VDC
Nominal weight: adjustable between 4 and 10 VDC
Span : au moins 2 V

4 contact inputs DATACard 0 V : 4 volt free contacts
DATACard 24 V : 4 differential contacts (input 24 VAC)
DATACard 48 V : 4 differential contacts (input 48 VAC)

Output: RS 232 for the connection a (portable) compatible PC with a DOS version 3.3 (or higher) Connection with a special COMCABLE

Securities : 4 LEDs for testing the good operation of the inputs (lift, lower, cross travels, long travels) 1 LED for:

- a. testing the good operation of the DATACard is lit once a second.
- b. testing the data transfer during the data tapping is lit 3 times a second

Memory : A lithium battery (with a minimum service life of 5 years)

Storage capacity : At least 1 year (using the lifting keyboard at a rate of 8 hours/day).



Otomasyon, Danışmanlık Ltd. Şti.

STFA Blokları B4 Blok D.68
34742 Kozyatağı / İSTANBUL
Tel. +9.0216 384 3164
Fax. +9.0216 380 0271
e-mail kibele@doruk.net.tr
<http://www.kibele.com.tr>